



Installation Instructions – HONDA CRF1000 Africa Twin Pannier Rack

Thank you for purchasing a BUMOT luggage system for your motorcycle. BUMOT luggage, handcrafted in Bulgaria, is designed for the rider who demands the most durable and functional luggage for their adventure touring. We're confident you will enjoy your new luggage system for years to come.


Please read through these instructions completely before starting installation. Leave all hardware loose until all components are in place and initial assembly is completed. Once everything has been installed, tighten all bolts snugly. Do not apply liquid threadlock (Loctite or similar) to any bolt which has a self-locking nut.

Installation Hardware Contents -

- Plastic part – Qty 2
- M6 x 20mm Bolt – Qty 2
- M6 Self-Locking Nut – Qty 2
- M6 Washer – Qty 4
- M8 x 20mm Bolt – Qty 2
- M8 Self-Locking Nut – Qty 4
- M8 Washer – Qty 4
- M8 x 90mm Bolt – Qty 2
- Aluminum Spacer $\phi 20 \times 7\text{mm}$ – Qty 2
- Aluminum Spacer $\phi 20 \times 11\text{mm}$ – Qty 2
- Aluminum Spacer $\phi 16 \times 44\text{mm}$ – Qty 2

Instructions -

1. Remove the both seats.
2. Remove the two bolts shown on the picture.

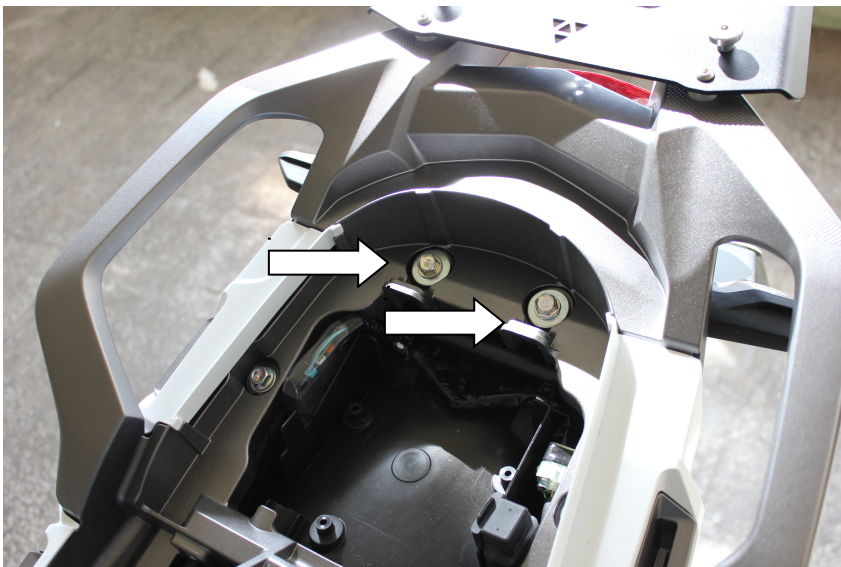


3. Use the template and drill two holes 20mm as shown on the picture.




4. Mount the upper cross bar. Use the included aluminum spacers 16 x 44mm and two bolts M8 x 90mm. Do not tighten them fully yet.



5. Put the two plastic parts in the left and right sides as shown in the picture.

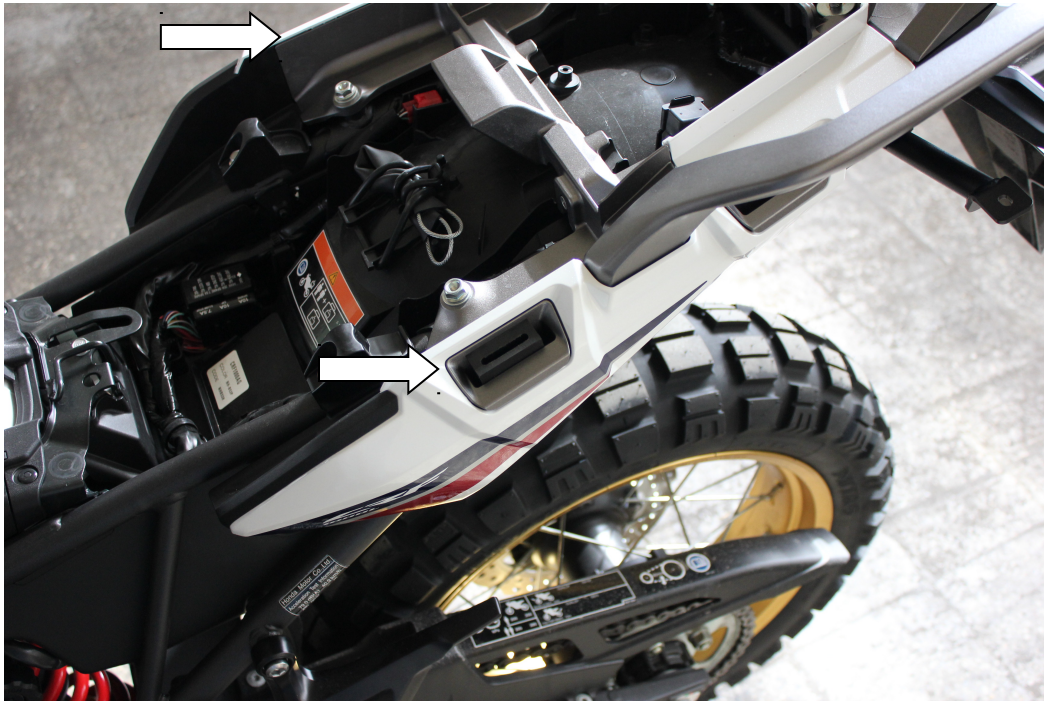


6. Remove the two bolts and passenger peg brackets from both sides

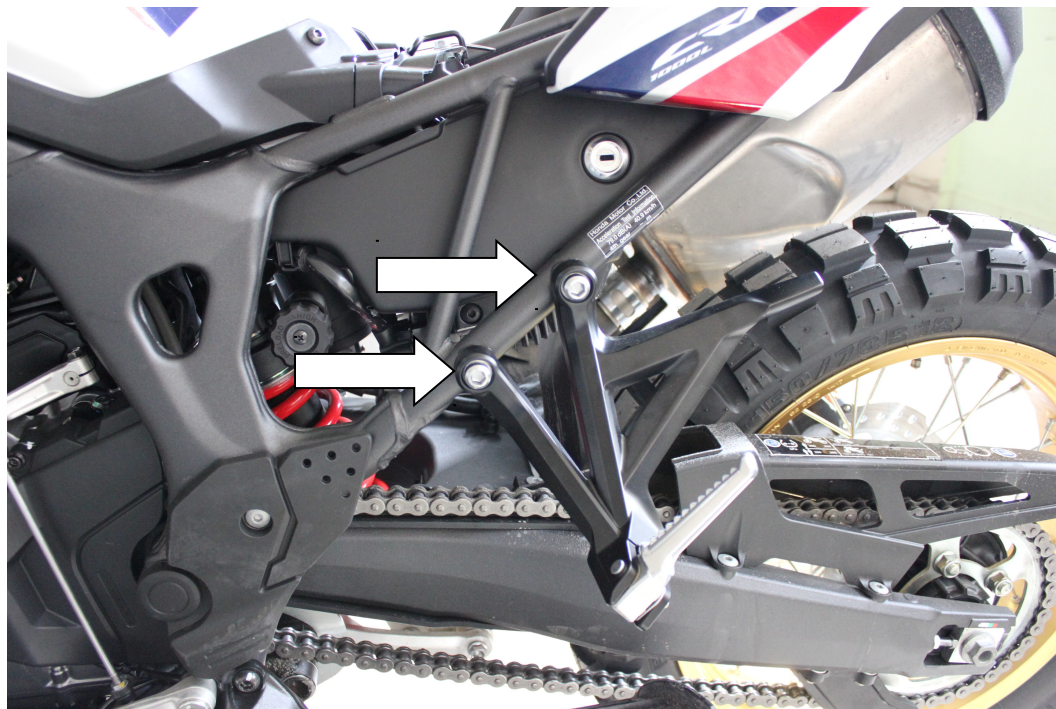

7. Attach the left side pannier rack to the plastic part and upper cross bar with M8 x 20mm bolts, two M8 washers, and two M8 Self-Locking nuts as shown in the picture. Do not tighten them fully yet.



8. Attach the passenger peg with OEM bolts and washers and the 20 x 7mm and 20 x 11mm spacers as shown in the picture. Tighten them fully.

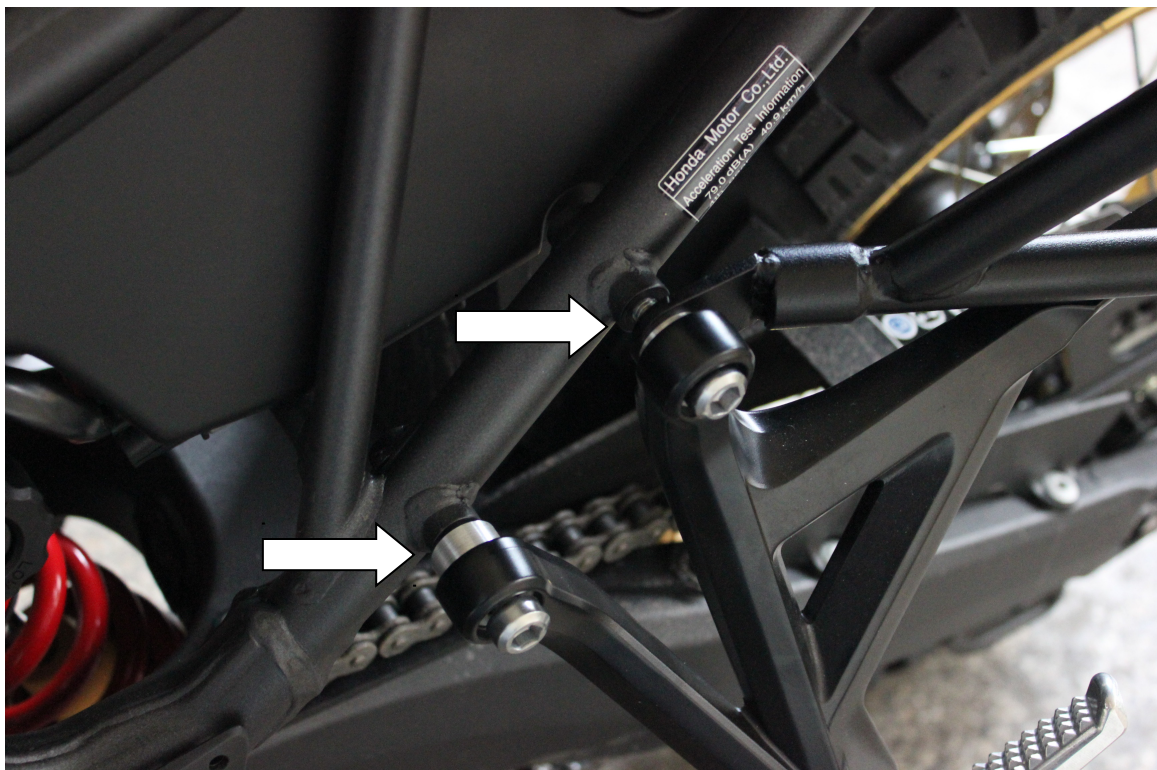


9. Install the rear cross bar with supplied M6 x 20mm bolts, M6 washers, and M6 self-locking nuts as shown below.



10. Follow steps 7-9 to attach the right side pannier rack.

11. Tighten M8 x 90mm Bolts on the upper cross bar, then the M8 x 20mm bolts. Tighten the M6 x 20mm bolts on the rear cross bar. Install the M8 self-locking nuts and tighten as shown in the picture.

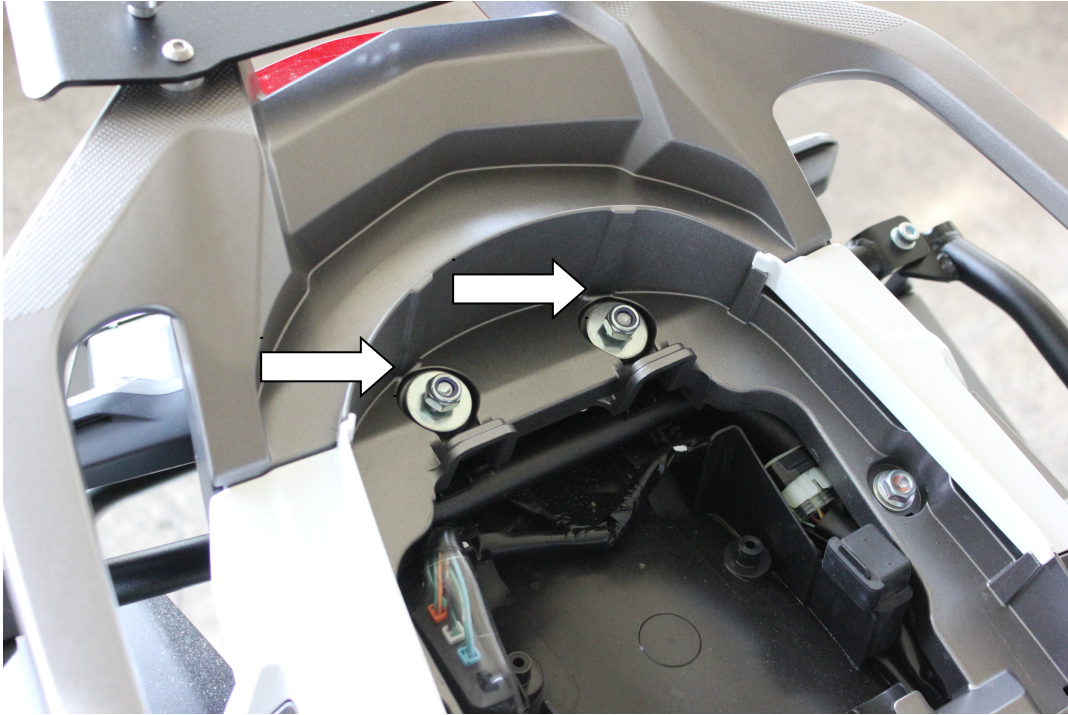

12. Check and re-tighten all hardware after 50-100 miles.

Enjoy your new BUMOT luggage system!

BUMOT Motorcycle Luggage
Ph:+359 887 649 709
www.bumot.eu
info@bumot.eu