

INSTALLATION INSTRUCTIONS BMW R1200GS LC 2013

Thank you for purchasing Bumot Luggage Systems for your motorcycle. This luggage, handcrafted in Bulgaria, is designed for the rider who demands the most durable and functional luggage for their adventure touring. Bumot Luggage has built in several features, including hinged lids and strap attachment points, to name a couple. Powder coating, inside & out,provides a durable finish for your luggage system. We're confident you will enjoy your new luggage system for years to come.

General Instructions:

Please read through these instructions completely before starting installation. Do not tighten any bolt until the entire assembly is completed. Leave all bolts completely loose until every component is in place. Once everything has been installed, tighten all bolts snugly. After the complete system has been snugly bolted down, and any adjustments made, remove one bolt at a time. Using blue Loc-Tite $^{\circ}$ reinstall and fully tighten each bolt. NOTE: Do not apply Loc-Tite $^{\circ}$ to any bolt which has is a self-locking nut.

1.Remove the sit and 4 bolts in photos below.






2. Place the 4 washers in the areas as shown in photos below



3. Place the 4 brackets in the areas as shown and return 4 bolts which you removed in step 1.



4. Open 5mm both sides of the bike.

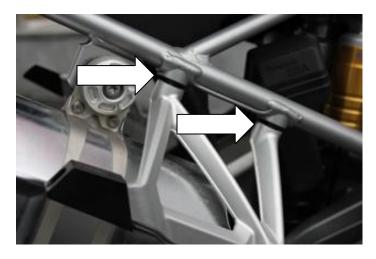



5. Now install the right side pannier frame and 4mm spacer.



6. Attach the pannier frame to the bracket with 2 bolts M8 x 20.





7. Install rear connecting bar with supplied M6X20 bolts, as shown below.



READY FOR ADVENTURE !!!

BUMOT Luggage System

Ph:+359 887 649 709 www.bumot.eu

info@bumot.eu